
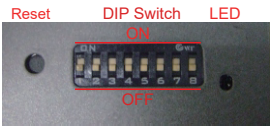


BENZ (NTG4.0) WIRING DIAGRAM--LDS-NTG40-MINI

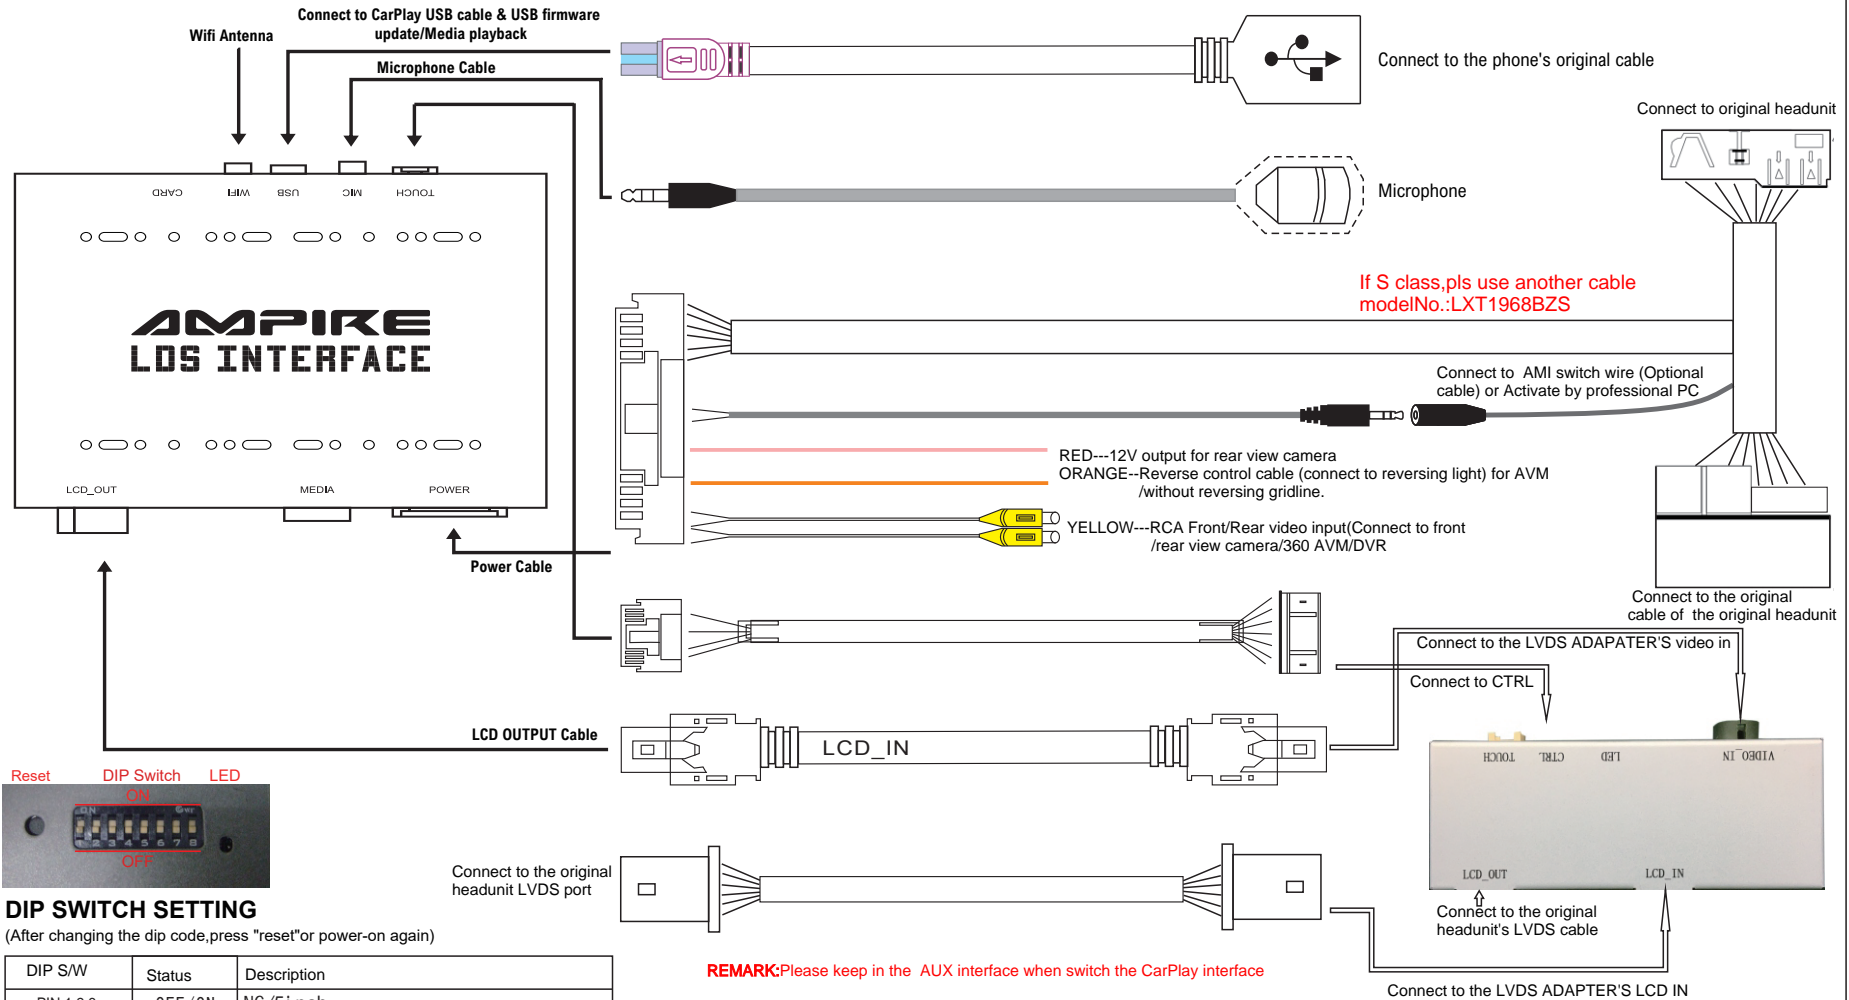

DIP SWITCH SETTING


(After changing the dip code,press "reset"or power-on again)

| DIP S/W | Status | Description |
|-----------|----------|----------------------------|
| PIN 1,2,3 | OFF / ON | NG/5i nch |
| PIN1,2 | OFF / ON | NG/7inch Telescopic screen |
| PIN1 | OFF / ON | NG/5.8i nch |
| PIN2 | OFF / ON | NG/7i nch |
| PIN1,3 | OFF / ON | NG/S class 8 inch |
| PIN4 | OFF / ON | NG/NG |
| PIN5 | OFF / ON | NG/NG |
| PIN6 | OFF / ON | NG/NG |
| PIN7 | OFF / ON | NG/NG |
| PIN8 | OFF / ON | NG/NG |

REMARK:Please keep in the AUX interface when switch the CarPlay interface



- 1) Long press and hold "BACK"button to switch MENU,short press"C" button again,exit MENU.
- 2)Short press "C" or "TEL" button to open "Sir".
- 3) Knob to control up/down/right/left/ok.

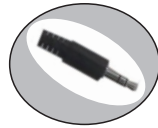

AUX Connector
Pls plug it into the original AUX IN port