



Peugeot USB Installation and Usage Instructions

Ensure ignition off, key removed.

Remove radio from dash as per usual. It is optional whether or not to remove the Quadlock / MOST connector.

Ensure the CD changer connector (black) in the Quadlock plug is disconnected:



Insert the Connects2 lead into the empty slot:



Connect the opposite end of the Connects2 lead to the Connects2 Adaptor Box.

Complete installation by re-fitting radio and any other installation tasks (such as routing a USB cable from the adaptor to a suitable place)

Switch on the ignition and wait at least 30 seconds for the adaptor to configure itself and start communications with the radio.

Usage:

The adaptor simulates a CD changer, so you can select it via the "Source" button on the radio, or the stalk buttons (if fitted). You should leave approximately 10 - 15 seconds after plugging a device into the USB connector before attempting to select the adaptor via the "Source" button. Each disk is simulated by a specific folder on the USB device; each track is simulated by each file in that folder.

Controls:



1: Previous Track/Restart Track
3: Next Track
5: Menu mode
7: Source selection (as per usual).

2: Next 'Disk'
4: Previous 'Disk'
6: Select 'Disk'

Menu mode:



"Activate track intro" – Will play the first 8 seconds of each track

"Activate CD repeat" – Restarts at the beginning of the current 'disk' once the end has been reached, rather than progressing to the next 'disk'.

"Active random play" – Play the tracks on the current 'disk' in a random order

USB Directory Structure

The directories on a USB device should be in the following order. Directories that do not follow this criterion will be ignored by the adaptor:

DISC1
DISC2
DISC3
DISC4
DISC5
DISC6

For best results, the number of files in each directory should not exceed 99.

Notes:

The adaptor will allow you to play all the MP3's on your USB device. However, if the number of Songs in a directory exceeds 99, then the track number will wrap around at 99, and the "number of tracks" will be set to 99 (i.e. The display will show "Track 1/99" up to "Track 99/99" than back to "Track 1/99").

The adaptor will not exist in the source list for approximately the first 10 - 15 seconds after a USB device has been plugged in.