




E-Mail: sales@incartec.co.uk Website: www.incartec.co.uk

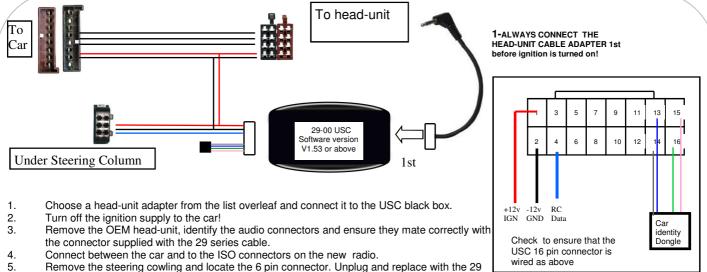


- Remove the steering cowling and locate the 6 pin connector. Unplug and replace with the 29 series replacement connector. The data wire is pin 4 on this connector.
- 6. CHECK that the red wire is 12V IGNITION switch then turn on ignition
- Test unit before fully fitting radio and trims back.

Test unit before fully fitting radio and trims back.

7

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

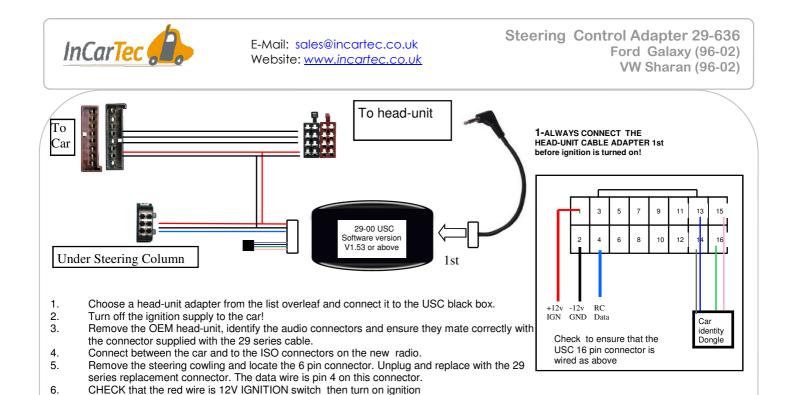

If Problems: Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW

