

## Installation Manual Double DIN Kit 381275-01 / 391275-01



7. Place the metal bracket including the headunit.

Connect all required wires.

Place the dashboard panel, place the radio trim.




## Installation Manual Double DIN Kit

Standard: 381275-01

Rubber-Touch: 391275-01

### • SsangYong Kyron


Compatible with double DIN devices

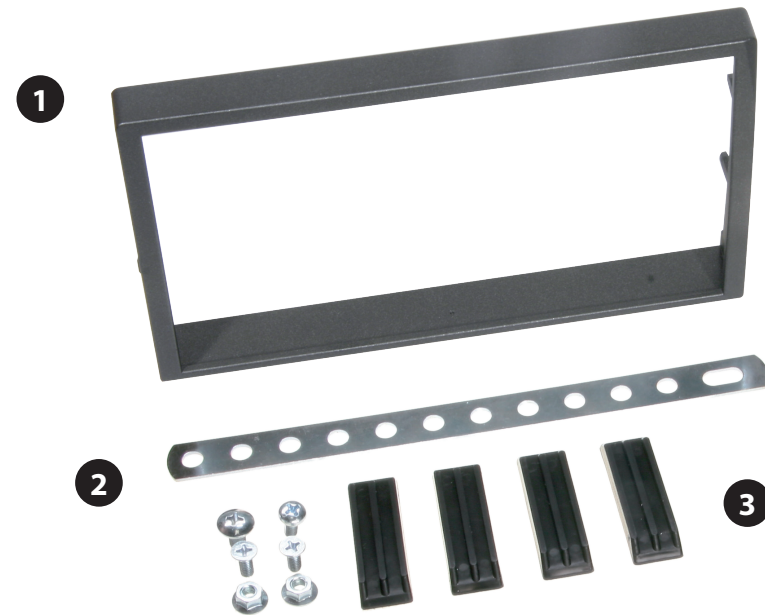


#### Double DIN Set contents

- (1) Trim Plate
- (2) Metal Band
- (3) Plastic Spacers


## Installation Manual Double DIN Kit 381275-01 / 391275-01

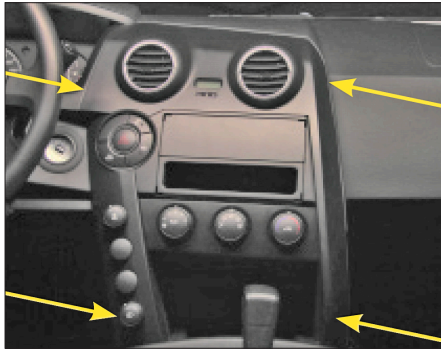

1. Remove the panel under the climate control panel.

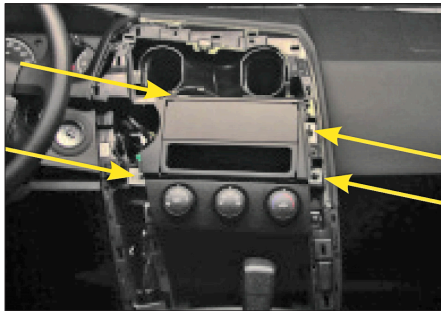


2. Remove the original bracket, which is tightened by four screws at the location of the arrows.

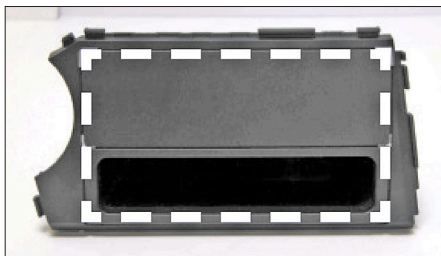

3. Remove the original plastic bracket from the metal bracket, which is tightened by four screws.


The inner plastic panel must be removed carefully.  
(see white line)

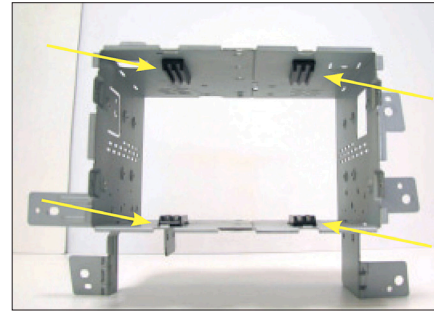


4. Place the 4 plastic spacers in the metal bracket (see arrows).



They must be placed 2 cm measured from the edges.

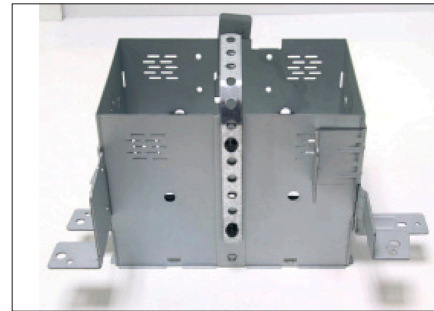

5. Mount the metal band beneath the original bracket.

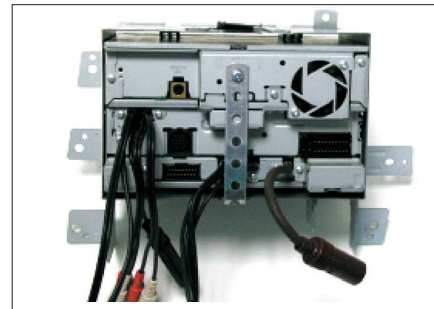

6. Tighten the headunit onto the metal band. Various positions are possible.

Choose the positions which gives the best result.