


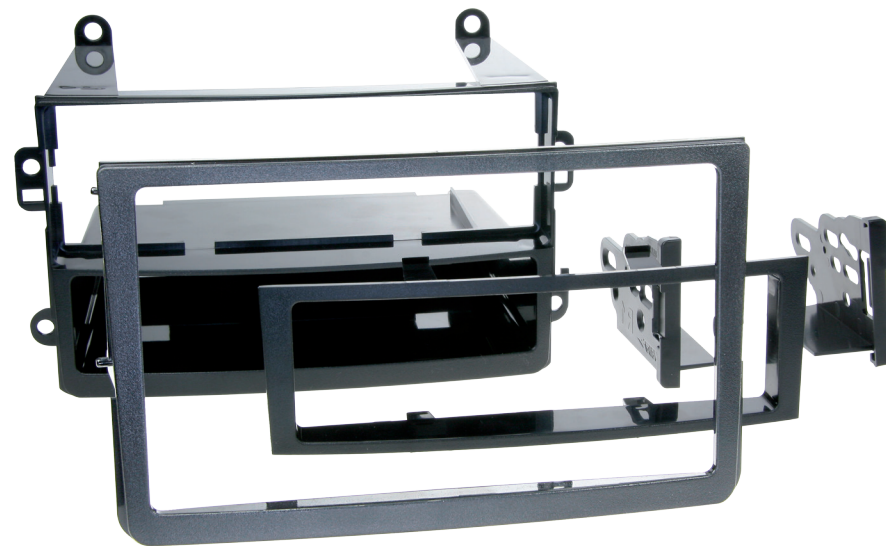

Installation Manual
Double DIN Kit
381210-11

• **Nissan 350Z 2006->**

Compatible with double DIN devices



1. Remove the shaded tab on both Left and Right Brackets as illustrated below.
2. For double DIN radio applications ONLY cut and remove center rib from DITR-744 and file edges smooth.
3. Attach the DITR-744 to the IMB-744L and IMB-744R mounting brackets.
4. Attach (1) ISO spacer to the inside upper part on both Left and Right mounting brackets as shown in Fig. A.
5. Insert ISO mountable radio between Left and Right brackets and attach radio to brackets using screws supplied with radio (when possible) or screws supplied with kit.
6. Mount radio and side brackets to factory radio bezel.
Then place radio trim bezel back into position.
7. Attach a rear support bracket to the rear of the radio components and adjust as needed to allow rear support bracket to rest in the sub-dash (optional).
8. Mount radio with brackets to sub-dash.
9. Re-attach all harnesses to radio trim bezel and re-assemble dash, (this is a tight fit and may require some patience). You may also remove the forward section shown in Fig. D below from the Left and Right mounting brackets.

NOTE: #1 - ISO trim ring (DITR-744) must be used in place of after-market radio's trim rings. For ISO mount applications, mount after-market radio components to side brackets using screws provided with radio when possible or hardware included with kit.

