




Installation Manual Double DIN Kit

Standard: 381190-26

• Smart Fortwo (BR451) 2007->

Compatible with double DIN devices

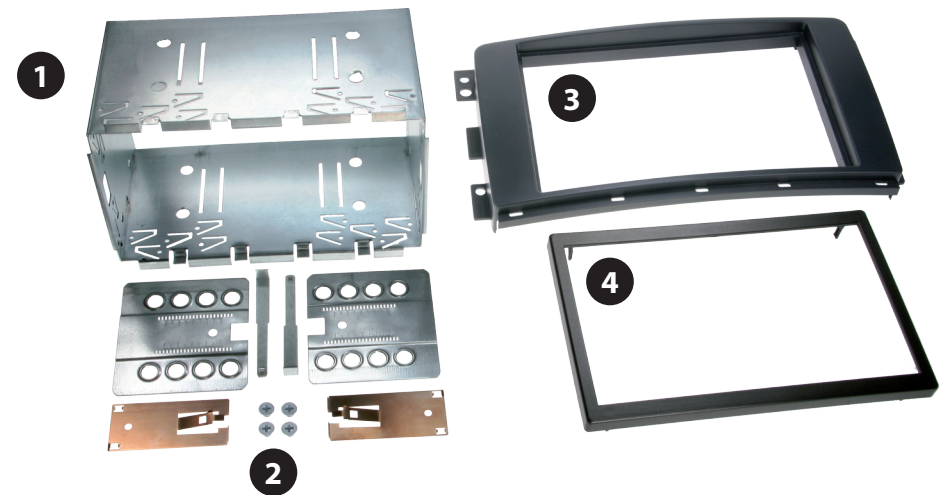

Double DIN Set contents


- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame



1. Smart Fortwo with radio preparation (pocket) or OEM head unit



2. Remove the switch unit (fixed by clamps) by pulling it towards you

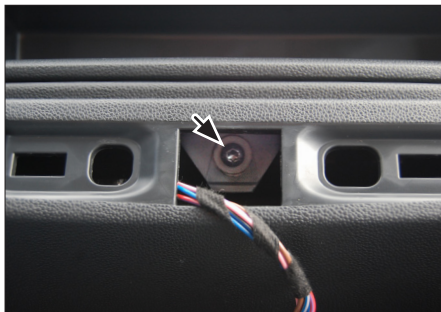


3. Remove the TORX TX25 screw holding the surrounding frame (see arrow)




4. Remove surrounding frame (fixed by clamps) - by pulling it towards you

Remove the 4 screws (see arrows) pull out the pocket / OEM head unit

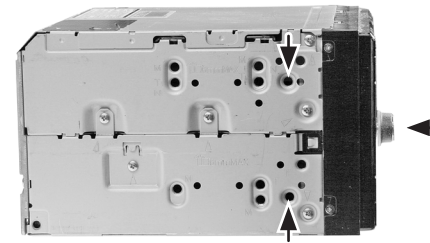

(sample photo)

Mount the metal brackets to the double DIN head unit.

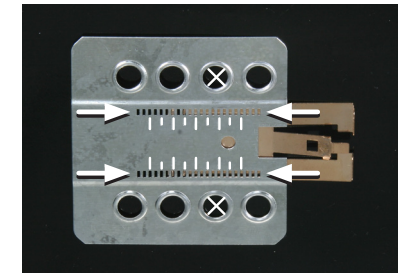

(sample photo)

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)



5. Push the Double DIN head unit into the metal frame, push both into the mounting frame and press the facia plate onto the mounting frame, until it snaps in.

Connect all required circuit points and place the Double DIN head unit on the dash board

Fix the Double DIN head unit with the 4 original screws (see arrows)



6. Reinstall everything in reverse order to finish installation