




colour: black

• Ford F-150 2009->

part-no.:
381114-05

Compatible with these Double-DIN devices



Double DIN Navigation

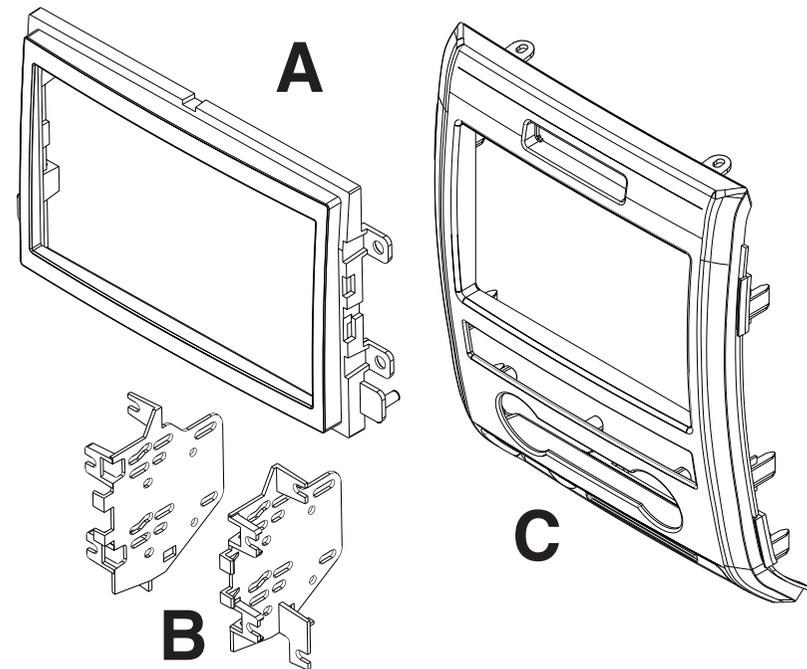

- (A) Trim Frame
- (B) Mounting brackets
- (C) Facia Plate



*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

- 6 Unclip and remove the hazard/airbag switch assembly from the factory radio trim panel. (Figure E)
- 7 Unclip and remove the cigarette lighter socket from the radio trim panel. (Figure F)
- 8 Remove (4) Torx screws securing the factory climate control to the radio trim panel. (Figure G)
- 9 Remove (4) 9/32" screws to remove the factory radio.

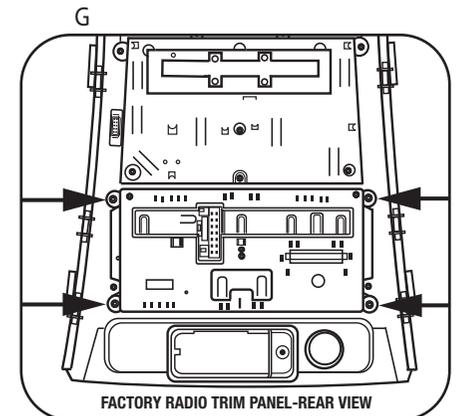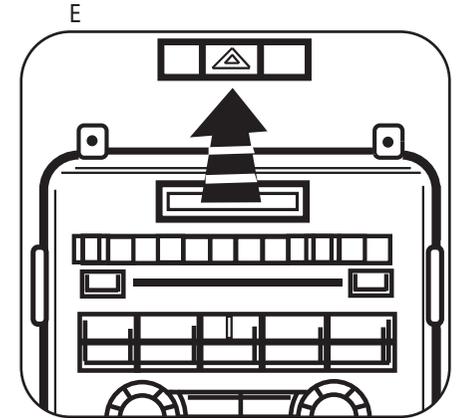

FACTORY RADIO TRIM PANEL-REAR VIEW

- 1 Clip the hazard/airbag switch assembly into the radio housing in the same location as the factory radio trim panel. (Figure A)
- 2 Clip the cigarette lighter socket into the radio housing in the same location as the factory radio trim panel. (Figure B)
- 3 Secure the climate control into the radio housing using the factory hardware in the same location as the factory radio trim panel. (Figure C)
- 4 Attach the (6) U style panel clips to the radio housing in the same location as the factory radio trim panel. (Figure D)

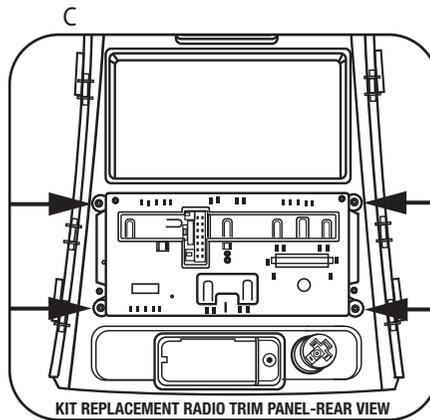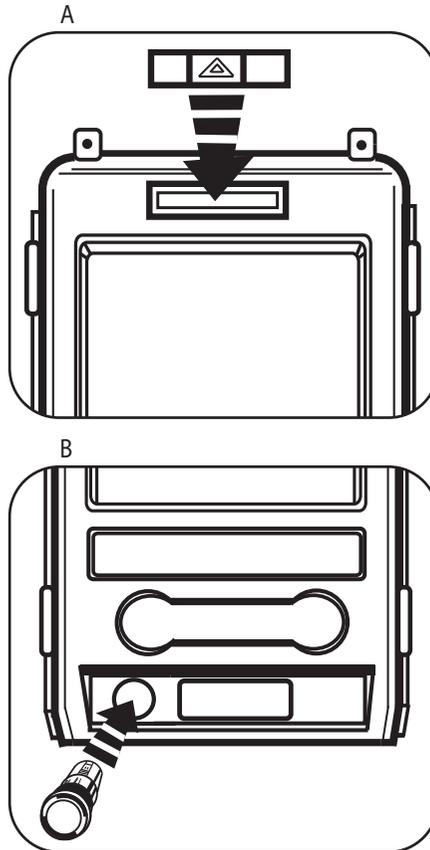

KIT REPLACEMENT RADIO TRIM PANEL-REAR VIEW

KIT REPLACEMENT RADIO TRIM PANEL-REAR VIEW

DOUBLE DIN RADIO PROVISION OR
STACKED ISO MOUNT UNIT(S) PROVISION

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Slide the appropriate side bracket over the mounting legs of the Double DIN trim plate aligning the holes in the trim plate and the bracket and rotate inward.
Note: The notch in the housing should be on top. (Figure A)
- 2 Slide the Double DIN or stacked ISO mount units into the bracket/radio housing assembly and secure the Double DIN or stacked ISO mount units to the assembly using the screws supplied with the Double DIN or stacked ISO mount units. (Figure B)
- 3 Cut and remove half of the top (2) mounting legs with the brackets attached. (Figure C)

