



10. Connect all required circuit points place Double DIN head unit on dash board



11. Install everything in reverse order to finish installation




Installation Manual Double DIN Kit

colour part-no. black 381178-36

Kia Carens 2013->

Compatible with these double DIN devices

Double DIN Navigation

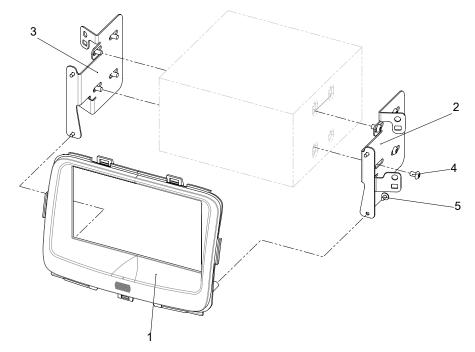

- (1) facia plate
- (2) mounting bracket right
- (3) mounting bracket left

- (4) flat headed screw
- (5) self tapping screw with collar

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidential or indirect damages.



 Unclip and remove OEM panel (see arrow)



5. Pull OEM panel toward your direction carefully



2. Remove 3 screws (see arrows)



6. Unplug cables of OEM panel carefully

Remove OEM panel



Pull air condition control unit towards your direction

Unplug cables carefully



7. Remove 4 screws of OEM head unit (see arrows)



4. Remove 2 screws located under OEM head unit (see arrows)



8. Unplug cables carefully and remove OEM head unit

All installation work must be performed by a qualified professional installer only.

The manufacturer / dealer is not liable for any kind of incidential or indirect damages.