
NISSAN MICRA 2014

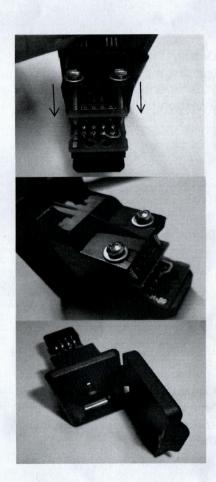

Screw through the PCB until you get a good fixing of the board to the plastic case.

Check that the USB and Jack sockets properly join to the front plastic.

This is the final result.


USB and Jack 3,5mm replacement PCB




05/2014 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

Installation Manual

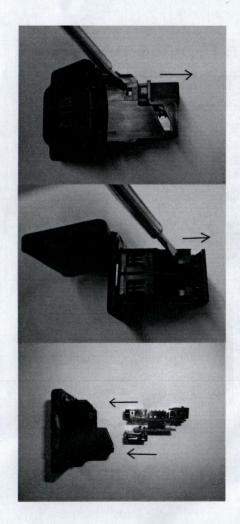

Take the original part and, in order to unhook the rear plastic, use a screwer by lightly pressing into the slots as shown in the picture.



Take the new PCB and slide it into the original housing.



During this operation, adjust the distance between the two PCB, in order to facilitate the insertion of the part.



Take the two screws and rings.



Insert the two screws into the holes of the original plastic and place both as shown in the picture.

All installation work must be performed by a qualified professional installer only. The manufacturer / dealer is not liable for any kind of incidental or indirect damages.