
Bentley & VW Phaeton(2010~2018) WIRING DIAGRAM---LDS-BLY-CP

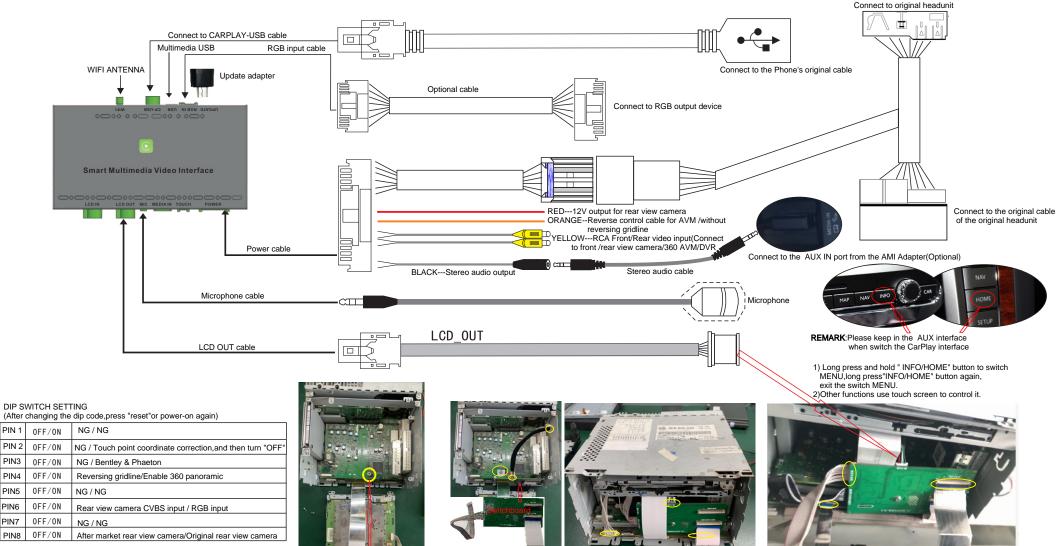



PIN 1

PIN 2

PIN4


PIN5

PIN6

PIN7

PIN8

1). After disassembling the panel, cover and the screws of the original engine, install the copper column in the position specified in the figure.



3). Insert the three lines of the original headunit's panel (50PIN FPC/12PIN/SD card cable). Then restore the panel of the headunit.