


Pioneer

Installation guide for :

- AVIC-Z1000D33-CHU




Fiat Ducato model year '14 - Open dash only

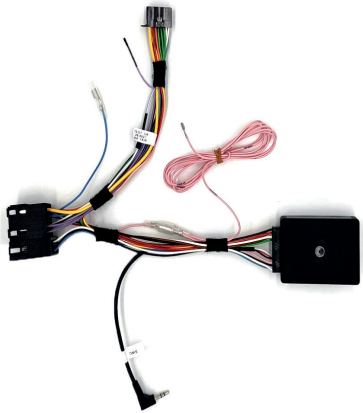

Interface


Depending on the kit, the interface may look different

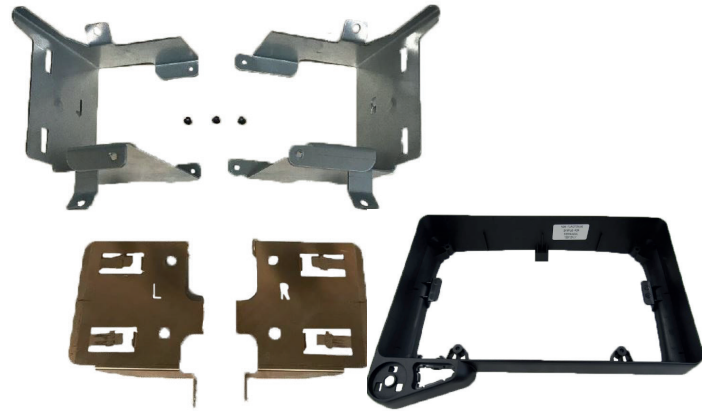

Installation kit - metal brackets and plastic fascia with rotary command keys




Original dashboard setup
Remove the storage pockets

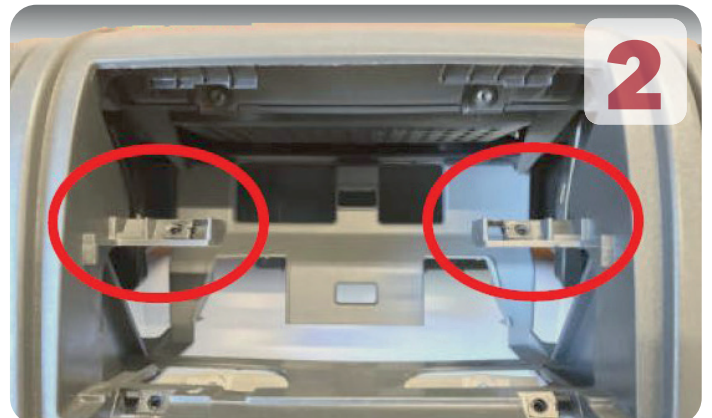

Locate the two support bars left and right in the dashboard



Cut the support bars in line with the dash

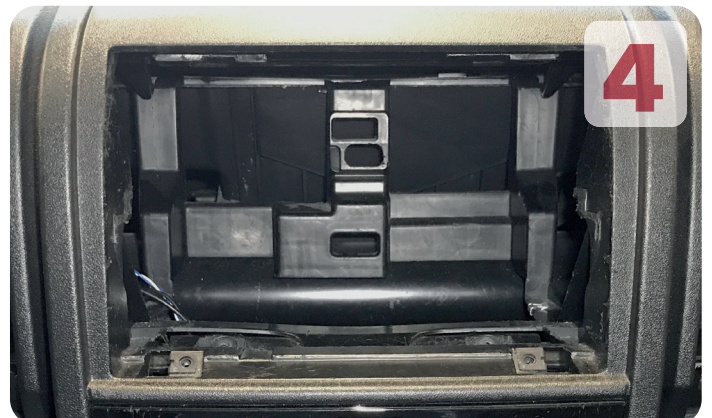

Dashboard after cutting

Pioneer



Start with the right side bracket



Put it in the radio cavity




Once inside, turn the bottom part downwards



Make sure the bottom mounting point is over the original mounting point




Pull the top mounting point underneath the original one to the front

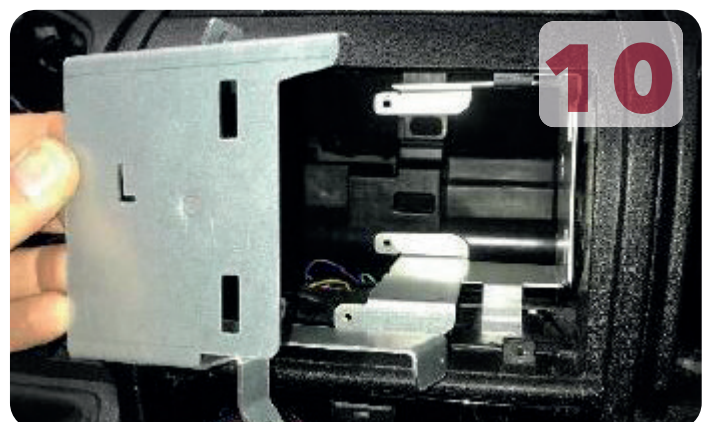


Next take the left side bracket

Pioneer

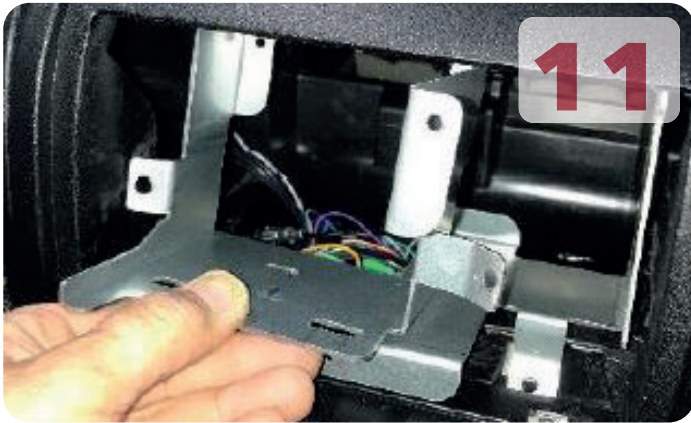


Also put it sideways

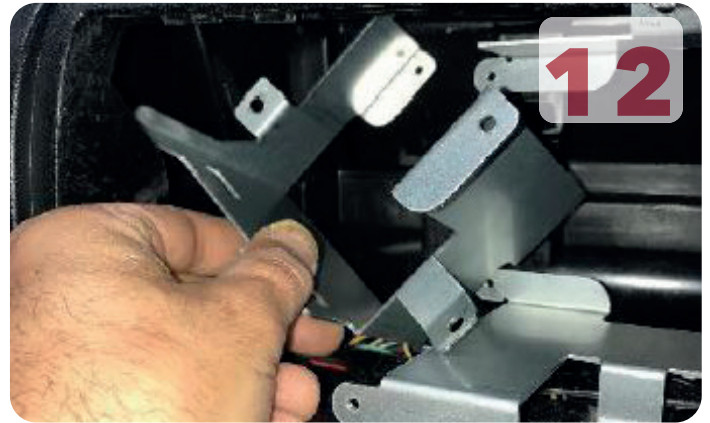


Once inside, turn it making sure the mounting points are in front of the original ones




Align the fixation points of both brackets

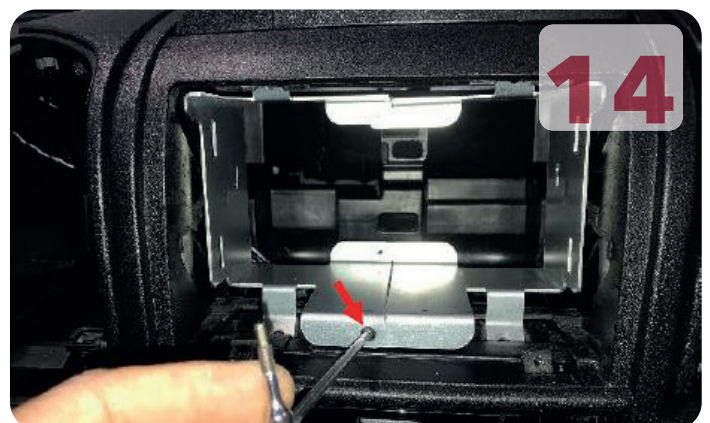

Start with the front lower one

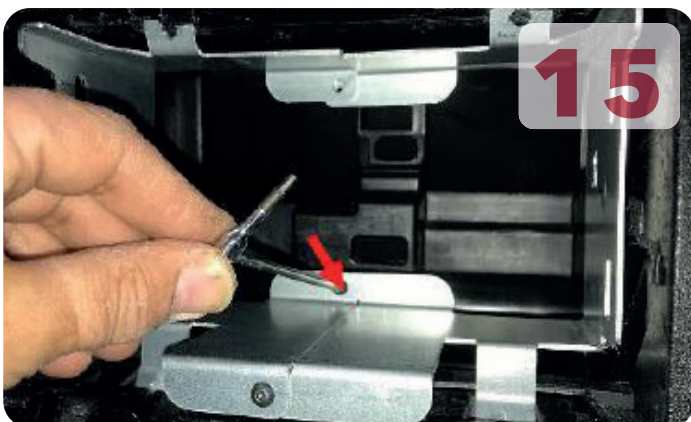


Continue with the lower rear fixation

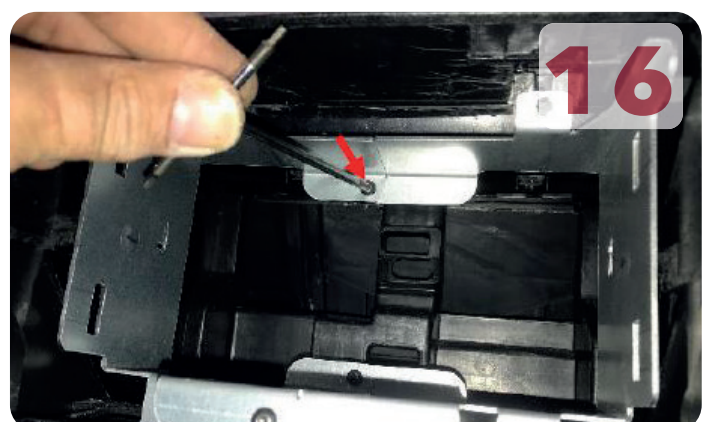


End with the top one

Pioneer

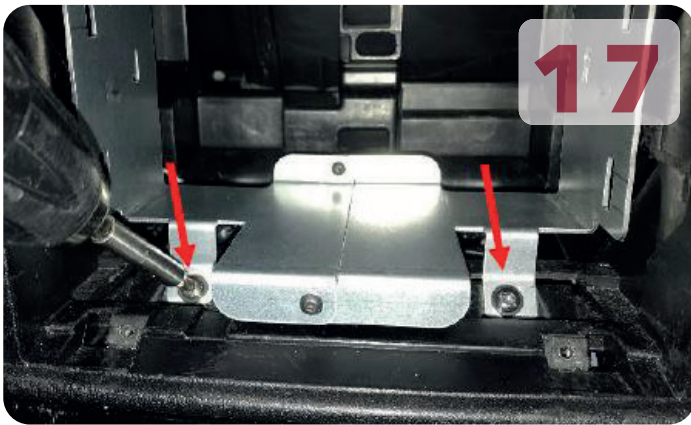


Secure the cage on the bottom mounting points using the original screws

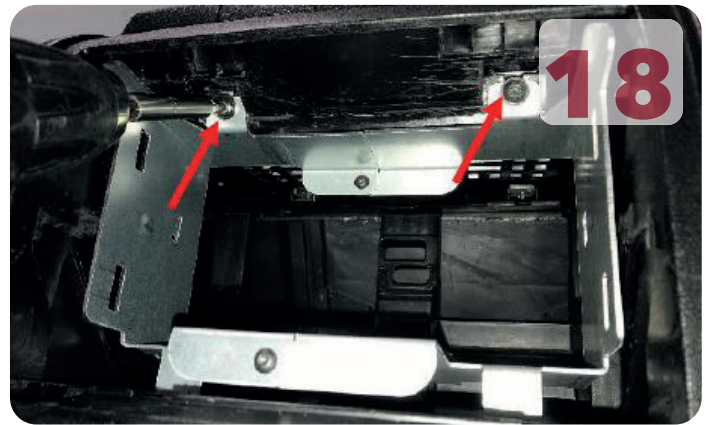


Secure the cage on the upper mounting points using the original screws




Make sure to pull the connection cable for the rotary commander out underneath the cage

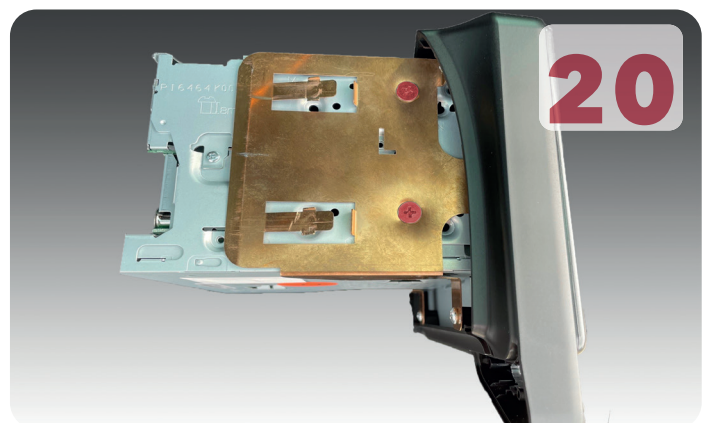

Attach the side brackets to the Pioneer unit
Left side

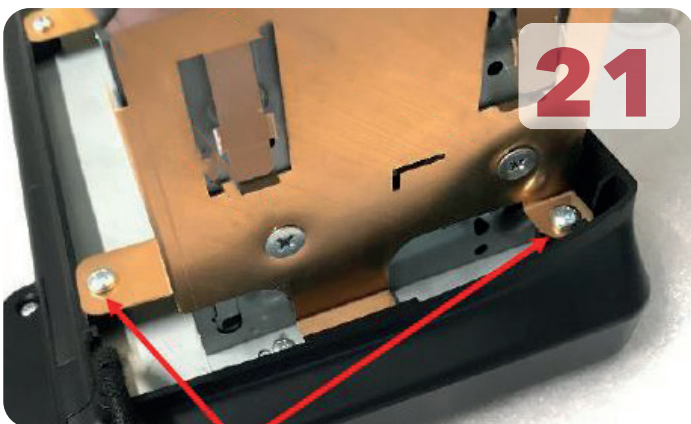


Attach the side brackets to the face panel
Left side

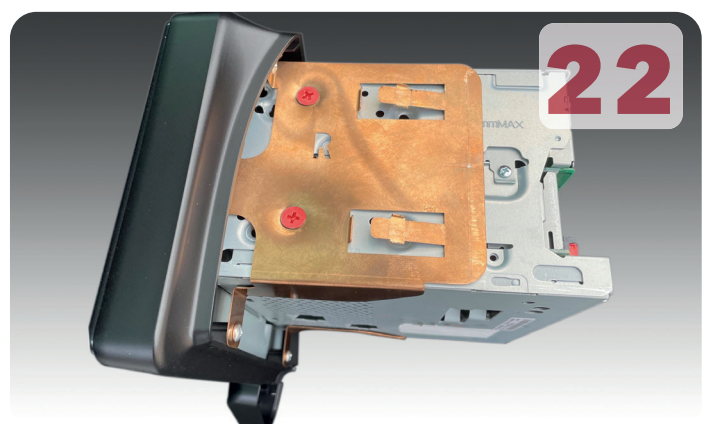

Attach the side brackets to the Pioneer unit
Right side


Pioneer

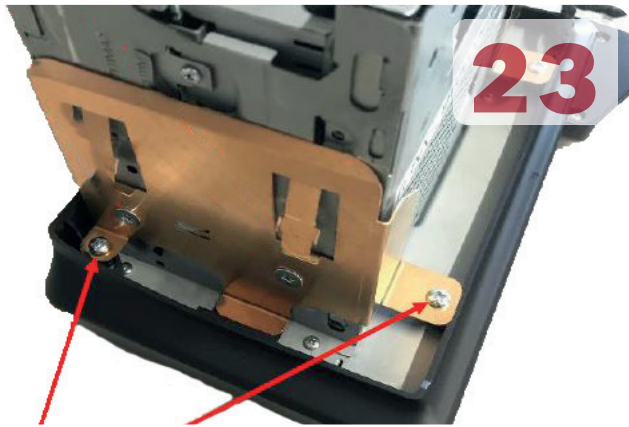

Attach the side brackets to the face panel
Right side




Final look of the mounting cage in
the dashboard

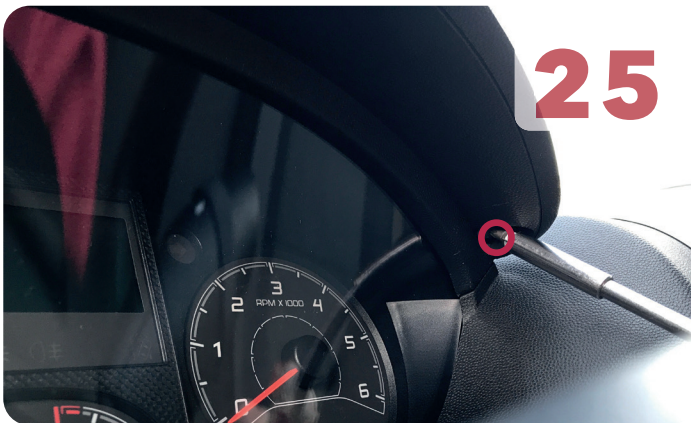


Remove two screws at the bottom of
the tacho visor



Remove the tacho visor
It is still secured with clips

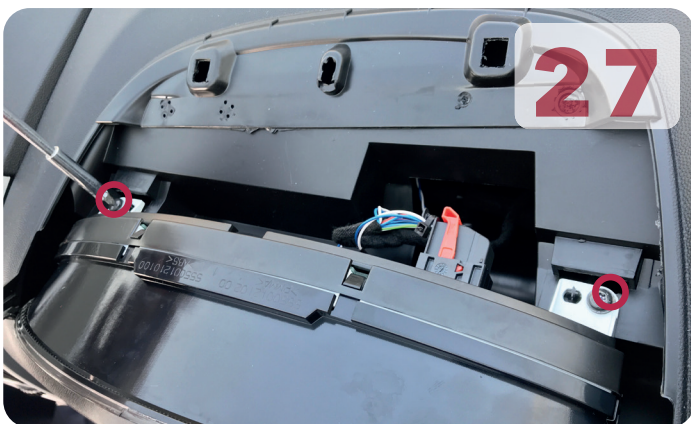


Remove two screws from the tachometer

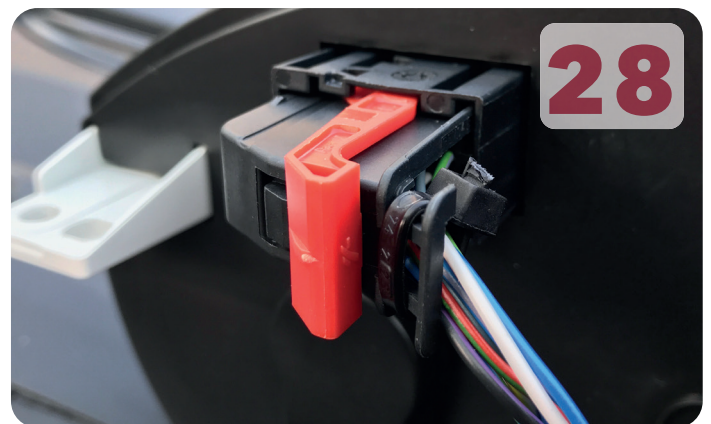

Remove the connector by sliding the red tab
away from the cables


Pioneer

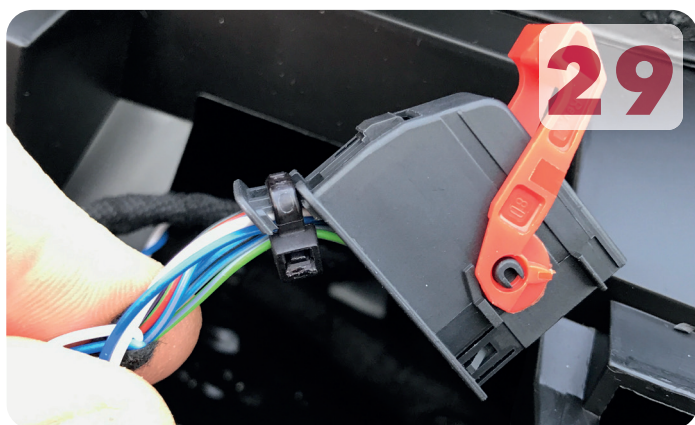


Cut the cable tie and slide the cables out towards the bottom



Remove the blue and white cable from the connector by pressing with a small screwdriver

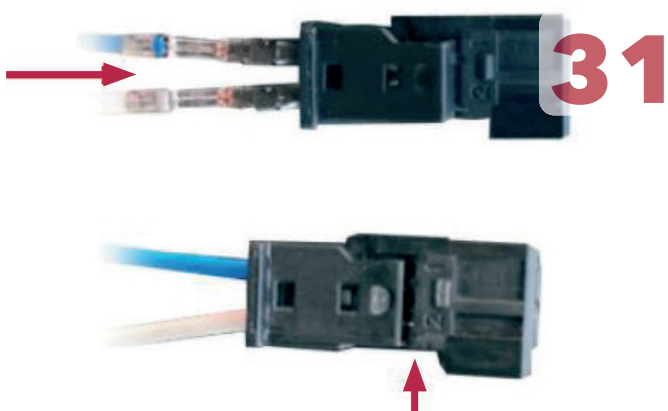

Insert the two pins in the supplied plug
Press the cover to lock the pins

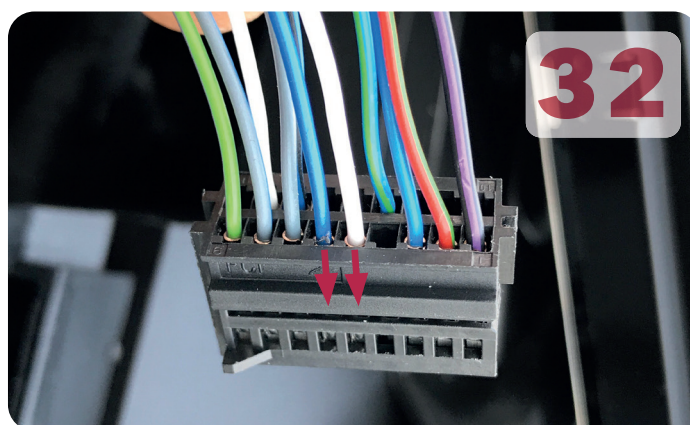

Install the blue and white cable from the interface in the tachometer connector (pos. 4 & 5)



Slide the cables back into the main housing and secure with new cable tie or electric tape



Connect back to the tachometer and to the interface


Pioneer



Install and connect the head up display onto the new tach visor




Install the visor with head up display and secure with the original screws

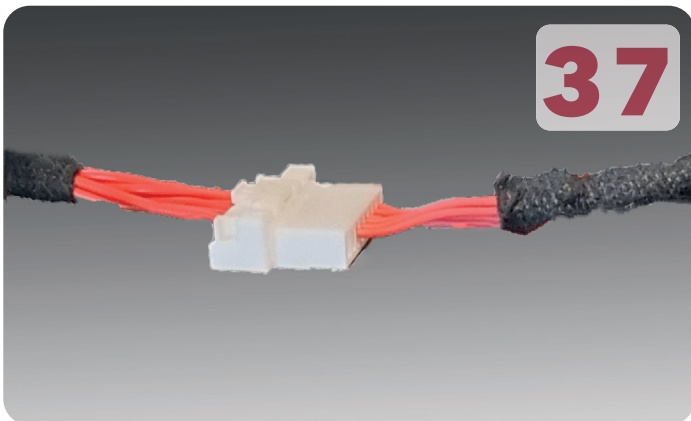

Connect the rotary connector plug and slide the unit in the dashboard



Once all connections are made, the unit can be pushed in the dashboard

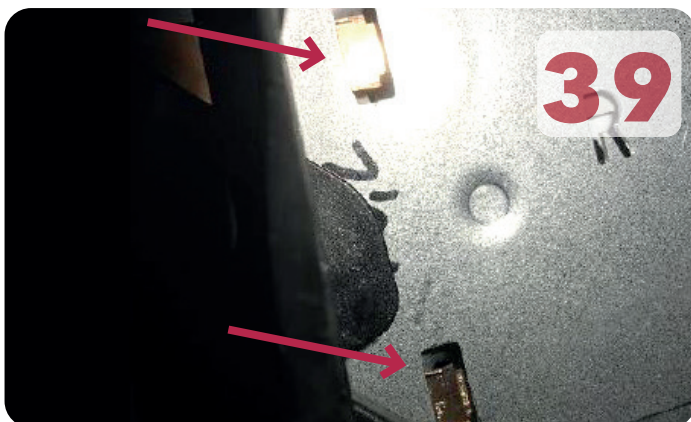

Push until the spring mechanism clicks
! Visual representation only
Airvents do not need to be removed !



Finished installation