



INSTALLATION INSTRUCTIONS FOR PART 99-7013TB

APPLICATIONS Mitsubishi Outlander 2007-up

99-7013TB







KIT FEATURES

- DIN radio provision with pocket
- ISO mount radio provision with pocket
- Double DIN radio provision
- Stacked ISO mount units provision
- *Textured and painted to match factory finish*



KIT COMPONENTS

- A) Radio Housing
- B) ISO Brackets
- C) ISO Trim Plate
- D) Double DIN Brackets
- E) Double DIN Trim Plate
- F) Snap In Pocket

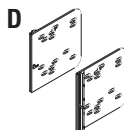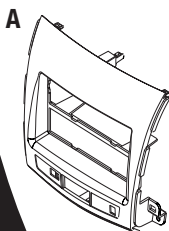

Harness & Antenna Connections (sold separately)
70-7005 - Mitsubishi Harness 07-up

TOOLS REQUIRED:

Small Flat Blade Screwdriver • Panel Removal Tool
Phillips Screwdriver • Socket Set



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2007-2010 METRA ELECTRONICS CORPORATION



TABLE OF CONTENTS

Dash Disassembly

- Mitsubishi Outlander 2007-up 1,2

Kit Preparation 3

Kit Assembly

- DIN Radio Provision with Pocket 4

- ISO Mount Radio Provision with Pocket 5

- Double DIN/Stacked ISO Units Provision 6

Final Assembly 7

***Note:**

Refer also to the instructions included with the aftermarket radio.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.






**Metra recommends MECP
certified technicians**

MITSUBISHI OUTLANDER 2007-UP


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the vents from the left and right side of the factory radio panel. (Figure A)
- 3** Remove (2) Phillips screws securing the radio trim panel then unclip and remove the panel. (Figure B)
- 4** Remove (4) Phillips screws securing the radio chassis. Unplug and remove the chassis. (Figure C)

Continued on page 2.

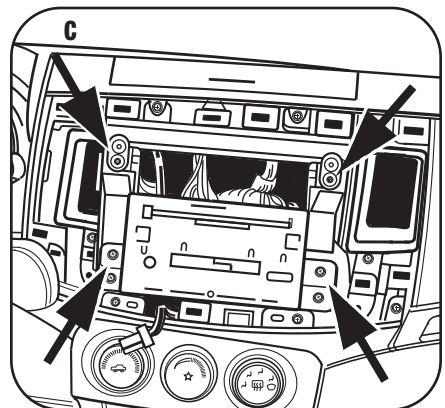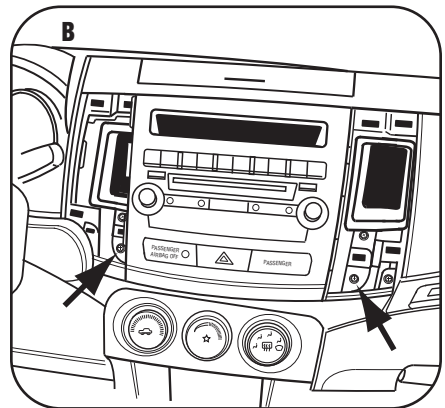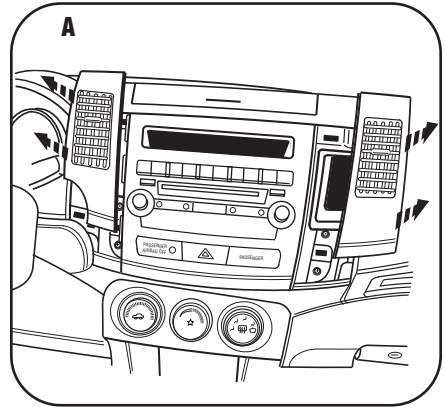


MITSUBISHI OUTLANDER 2007-UP


- 5** Remove (7) Phillips screws securing the hazard switch assembly to the back of the factory radio trim panel. Unplug the ribbon cable from the hazard switch assembly and remove assembly from panel from rear. (Retain the screws and switch assembly to be reused during kit preparation) (Figure D,E)

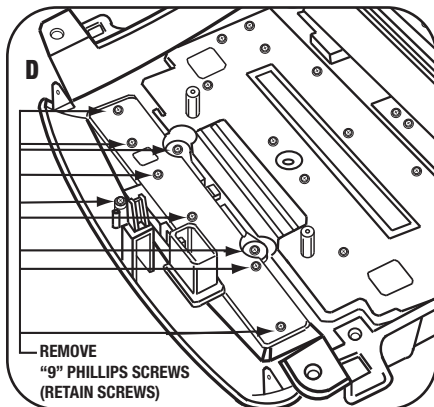

- 6** Remove the labels from the front of the radio trim panel at each side of the hazard switch by pushing them out from behind the panel. (Retain the labels to be reused during kit preparation) (Figure F)

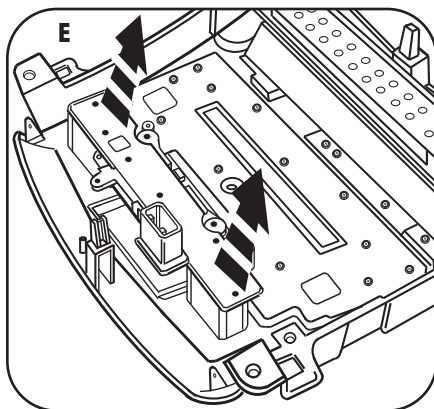



Continued to kit preparation.

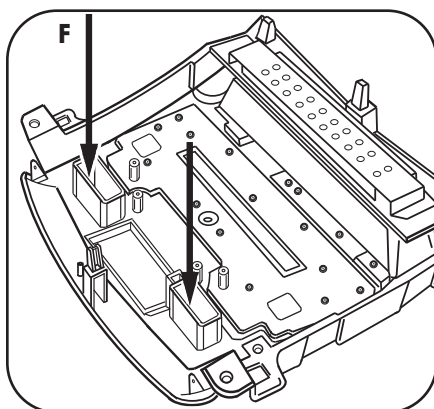

MITSUBISHI OUTLANDER 2007-UP

- 5** Secure the hazard switch panel into the radio housing using the factory hardware removed previously and apply labels from the front of the factory radio trim panel to front of the Metra radio panel. (Figure A,B)

Continue to kit assembly.


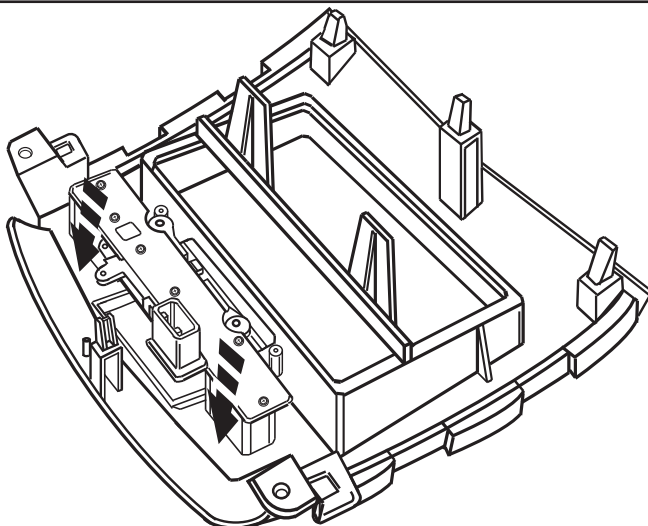
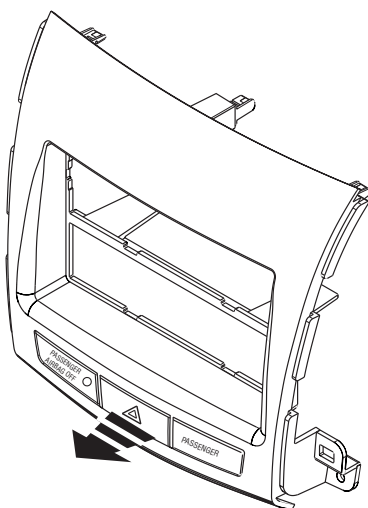
A**B**

DIN RADIO PROVISION WITH POCKET

****Note: Refer also to the instructions included with the aftermarket radio.***

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs outward. (Figure A)
- 2** Slide the aftermarket radio into the cage until it snaps into place. (Figure B)
- 3** Snap the pocket into the radio housing. (Figure C)

Continue to final assembly.


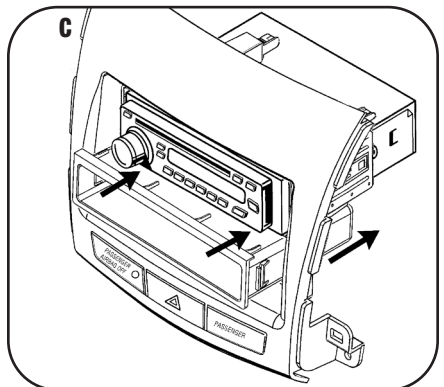
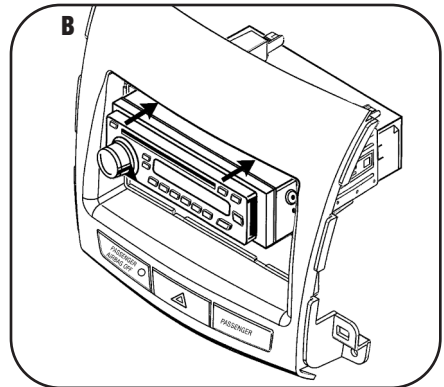
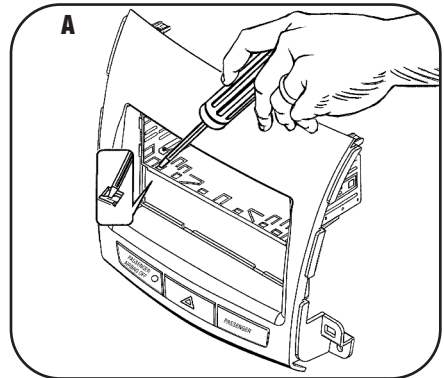


ISO MOUNT RADIO PROVISION WITH POCKET

****Note: Refer also to the instructions included with the aftermarket radio.***

- 1** Mount the ISO Brackets to the after-market radio using the screws supplied with the radio. (Figure A)
- 2** Slide the radio into the Radio Housing until it snaps into place. (Figure B)
- 3** Snap the Trim Plate onto the front of the Radio Housing. (Figure C)
- 4** Snap the pocket into the Radio Housing. (Figure D)

Continue to final assembly.

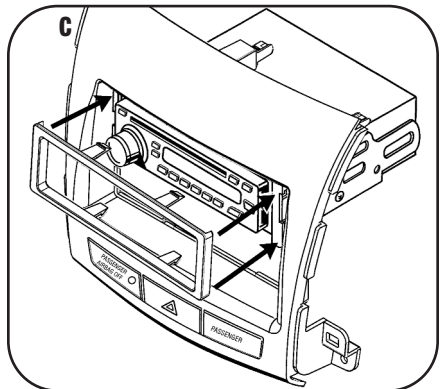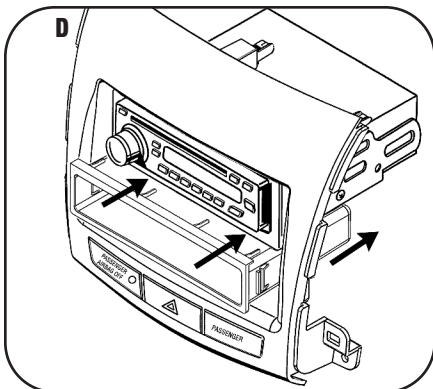
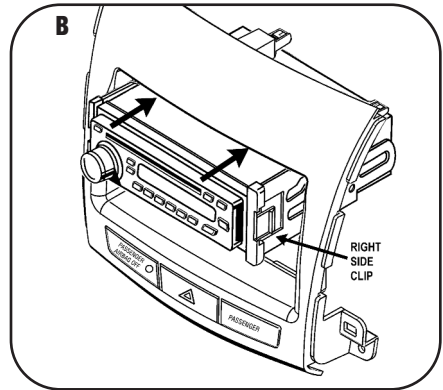
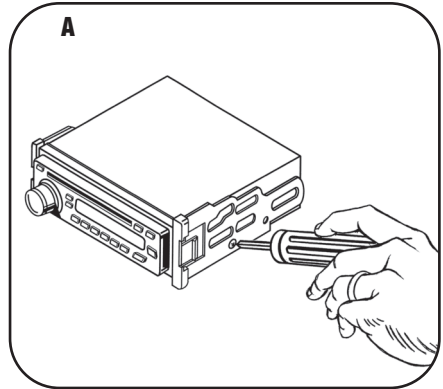


DOUBLE DIN/STACKED ISO UNITS PROVISION


**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Cut and remove the center bar from the Radio Housing. (Figure A)
- 2 Snap the Double DIN Brackets to the inside edge of the Radio Housing. (Figure B)
- 3 Slide the Double DIN or stacked ISO unit(s) into the bracket/radio housing assembly and secure the Double DIN or stacked ISO unit(s) to the assembly using the screws supplied with the unit(s). (Figure C)
- 4 Snap the Double DIN Trim Plate onto the front of the Radio Housing. (Figure C)

Continue to final assembly.

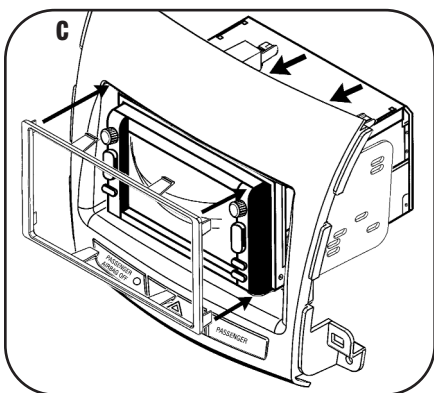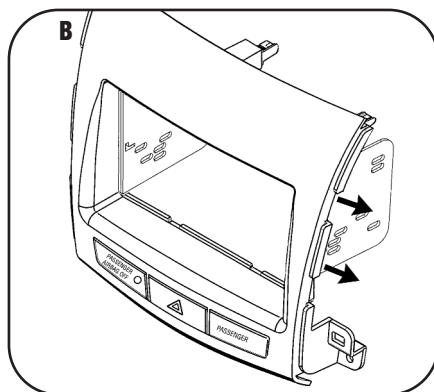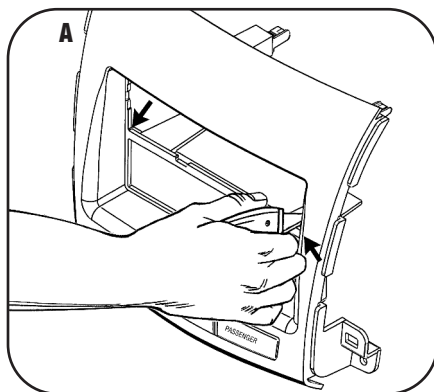

FINAL ASSEMBLY

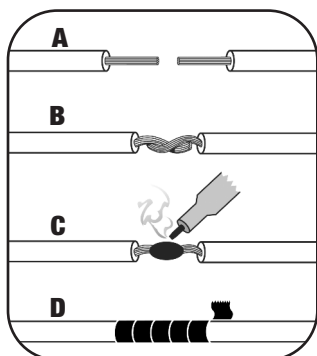

(A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble radio and dash assemblies in reverse order of disassembly.

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

METRA / EIA WIRING CODE

12V Ignition / Acc. Red

12V Batt / Memory. Yellow

Ground Black*

Power Antenna. Blue

Amp Turn-On Blue / White

Amp Ground. Black / White

Illumination Orange

Dimmer Orange / White

Right Front (+) Gray

Right Front (-). Gray/ Black

Left Front (+) White

Left Front (-). White / Black

Right Rear (+) Violet

Right Rear (-). Violet / Black

Left Rear (+) Green

Left Rear (-) Green / Black

***NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.



NOTES

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



99-7013TB

This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

99-7013TB INSTRUCTIONS



1-800-221-0932



www.metraonline.com

REV. 07/15/11 © COPYRIGHT 2007-2010 METRA ELECTRONICS CORPORATION INST99-7013